



METRI ENGINEERING SERVICES W.L.L.
مترى للخدمات الهندسية ذ.م.م

INVOICE

BILL TO
M/s DOHA DRUG STORE
Ms. Silpa S Kartha jenefer@dohadrugstore.com,qc@dohadrugstore.com, metraf@dohadrugstore.com,adaredh@doahadrugstore.com Doha-Qatar 44058615
PROJECT/SITE
DOHA DRUG STORE (COLD ROOM AMC)

DATE
25/09/2025
INVOICE NO.
1200053
PO NO.
AMC CONTRACT



#	DESCRIPTION الوصف	QTY الكمية	UNIT PRICE سعر الوحدة	TOTAL PRICE السعر الإجمالي
1	Settlement of Monthly Payment for Cold Room AMC Covering SEPT 2025	1	1333.00	1333.00
2				0.00
3				0.00
4				0.00
5				0.00
6				0.00
7				0.00
8				0.00
9				0.00
10				0.00
11				0.00

Remarks / Payment Instructions:

Beneficiary Details:
Mitri Engineering Services
Tel/Fax: +974 44876142
Doha - Qatar
Bank Details:
Bank Name: Commercial Bank of Qatar (Q.S.C.)

IBAN: QA64CBQA000000004580580187001
Account No.: 4580-580187-001
Swift code: CBQQAQA
Branch: GRAND HAMAD STREET



SUBTOTAL	1333.00
DISCOUNT	0.00
Balance Due	QR1,333.00

Tel: 44459207 - Fax: 44780499 - P.O.Box: 23107
E-mail: mes@mes.qa - Web: www.mes.qa



METRI ENGINEERING SERVICES W.L.L
متري للخدمات الهندسية ذ.م.م

Date:- 20-9-25		Doha Drug Store Monthly Maintenance Checklist Walk-In Chiller	Report #
----------------	--	---	----------

UNIT NO: 04000954 / unit-1

S.No.	DESCRIPTION OF MAINTENANCE ACTIVITIES	REMARKS
1	Clean the condenser coil properly.	Cleaned.
2	Check the operation of LP/HP Switches /Solenoid valve.	Checked.
3	Check and clean condensate drain line and tray.	Checked & Cleaned.
4	Check the evaporator fans operation.	Checked.
5	Record operating amps of compressor.	4.7 A.m.p
6	Compressor Cut-in Temperature.	4.4 °C
7	Compressor Cut-out Temperature.	6.2 °C
8	Inspect and tighten all loose electrical connections.	Tighten.
9	Check and verify compressor oil level.	Checked. okay.
10	Check if there is any leak.	Checked. no Any leak.
11	Check refrigerant level.	Checked okay.
12	Check evaporator Coil and clean with brush if necessary	Checked & Cleaned.

REMARKS:

unit Working fine.

MES technician name and signature


ASHOK. Kumar.

20.9.25



client's representative name and signature

OMR Daudh
20.09.2025

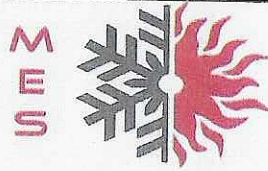

METRI ENGINEERING SERVICES W.L.L.
متری للخدمات الهندسية ذ.م.م

Date:- 20-9-25

Doha Drug Store
Monthly Maintenance Checklist
Walk-In Chiller

Report #

UNIT NO: OF000139 / unit-2

S.No.	DESCRIPTION OF MAINTENANCE ACTIVITIES	REMARKS
1	Clean the condenser coil properly.	Cleaned.
2	Check the operation of LP/HP Switches /Solenoid valve.	Checked.
3	Check and clean condensate drain line and tray.	Checked & Cleaned.
4	Check the evaporator fans operation.	Checked.
5	Record operating amps of compressor.	5.4 A.m.p
6	Compressor Cut-in Temperature.	4.2 °C
7	Compressor Cut-out Temperature.	5.8 °C
8	Inspect and tighten all loose electrical connections.	tighten
9	Check and verify compressor oil level.	Checked. OK.
10	Check if there is any leak.	Checked. no Any leak.
11	Check refrigerant level.	Checked. OK.
12	Check evaporator Coil and clean with brush if necessary	Checked & Cleaned.

REMARKS:

unit Working fine.

MES technician name and signature

ASHOK Kuman

20.9.25



client's representative name and signature

Omar Darghaz

20.09.2025

Signature of client's representative